 





Additional Information about OSD Operation

How to Reset the Factory Default Contrast

Advantech's products are especially designed for the factory floor and other harsh environments. The OSD control board may rarely suffer to static electricity, and this situation will cause the OSD stops functioning normally. The following procedures explain how to reset the factory default contrast:



1. Turn off the power.
2. Press ◀ and ▶ at the same time, don't release them.
3. Turn on the power, wait for 5 seconds.
4. Release ◀ and ▶.
5. There will be a menu showing on the top of screen, and then you can reset the contrast value to maximum or what you want.
6. Press "Exit" twice to save the setting.

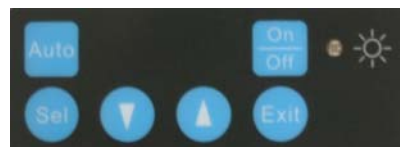

1. Turn off the power.
2. Press ▼ and ▲ at the same time, don't release them.
3. Turn on the power, wait for 5 seconds.
4. Release ▼ and ▲.
5. There will be a menu showing on the top of screen, and then you can reset the contrast value to maximum or what you want.
6. Press "Exit" twice to save the setting.

Note: It is unnecessary to do these procedures unless the OSD stops functioning normally or the brightness becomes lower than before.